



| ħġāŋōăĥĊđ . ñÖÅÃũ ħġ í ũî î î ð W - ÚĀĤĒîĕ ÈēĞđ ! ĭçĦĈĀíăñĭçđ fũìăĭ ÈìăĂũ í Âđ Запасные части -

[illegible]

[illegible]

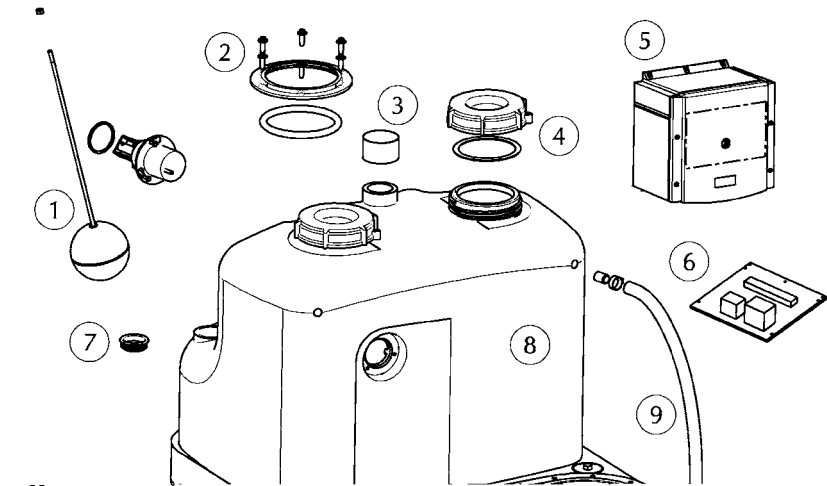

①	Leitung	Cable	JP43717
②	Stator + Gehäuse	Stator + Housing	JP47042
③	Rotorwelle	Rotor shaft	JP45791
④	Motorabdichtung	Motor seals	JP46806
⑤	Laufschraube	Impeller screw	JP46802
⑥	Lagersatz	Bearing set	JP46724
⑦	Lagerschild	Bearing housing	JP43720
⑧	Dichtungssatz	Seal set	JP46807
⑨	Laufrad	Impeller	
	10/4		JP45793
	15/4		JP45794
	25/4		JP45795
⑩	Schraubensatz	Screw set	JP47291

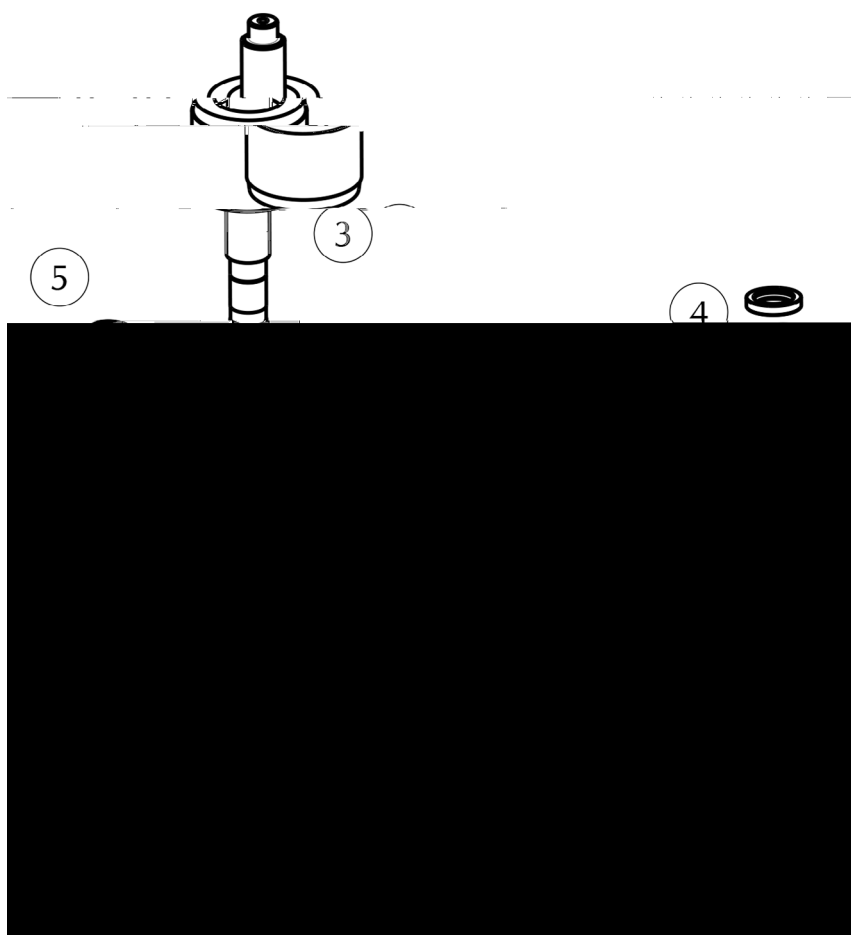

JUNG PU



① Leitung	Cable	JP43717
② Stator + Gehäuse	Stator + Housing	
25/2		JP44008
35/2		JP46211
③ Rotorwelle	Rotor shaft	
25/2		JP47038
35/2		JP47039
④ Gleitringdichtung	Mechanical seal	JP46567
⑤ Laufradschraube	Impeller screw	JP46805
⑥ Lagersatz	Bearing set	JP46214
	Bearing housing	JP43726
	Seal set	JP46807
	Impeller	JP46715